



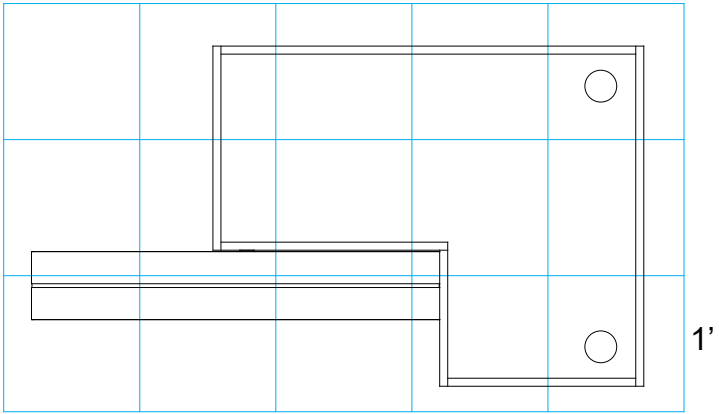


PLAN VIEW

1'

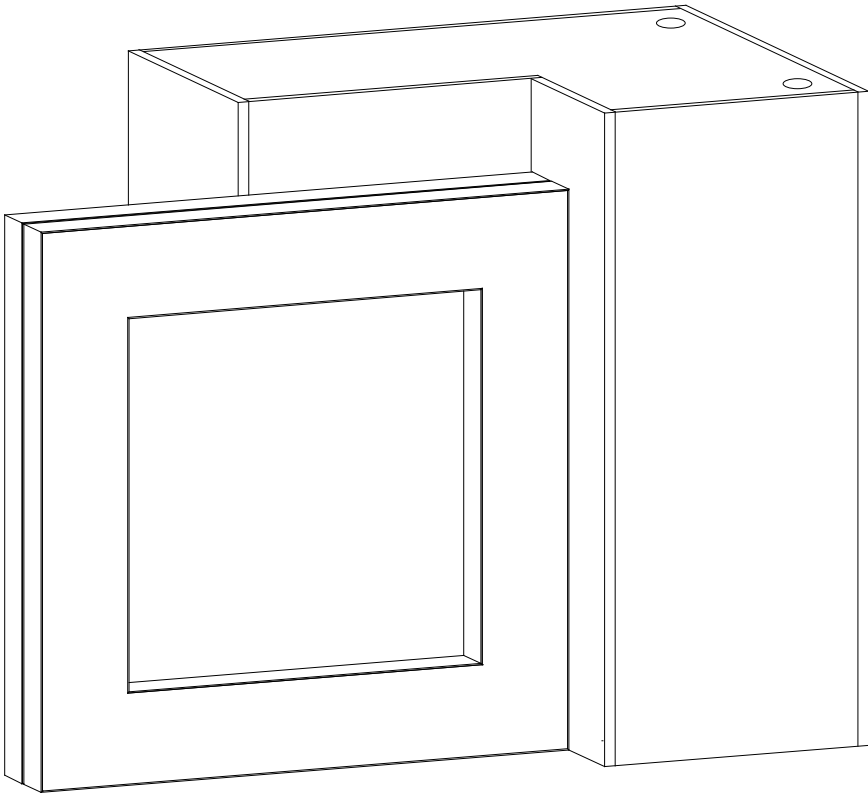

FRONT VIEW

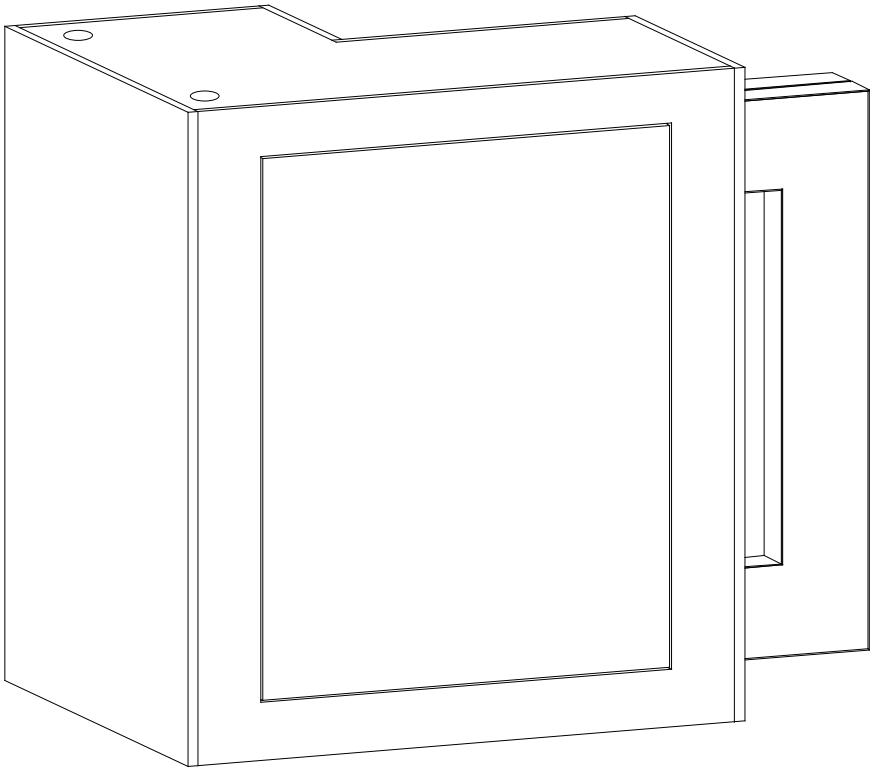

BACK VIEW

SETUP INSTRUCTIONS

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

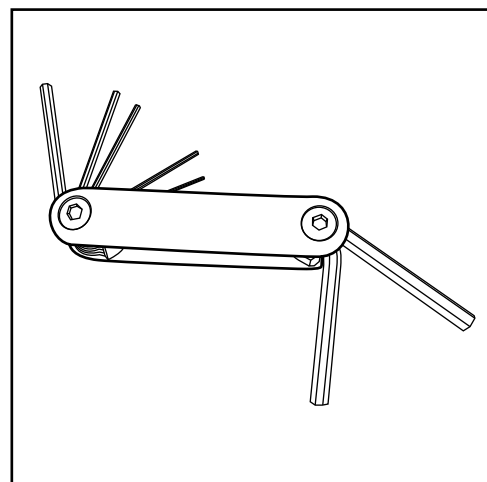


Hex Tool - Essential for Assembly

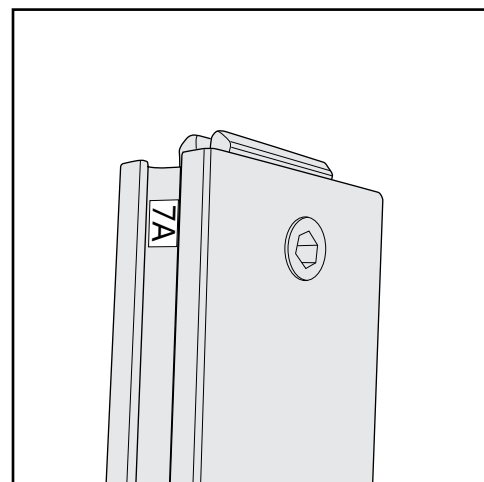


Part Identification - Numbering

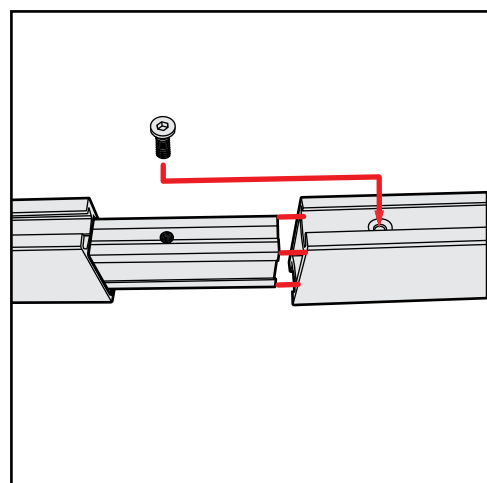


Spline Connection

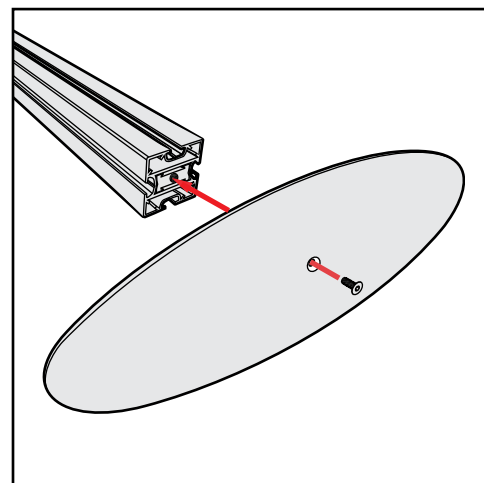

Base Plate & Extrusion Connection

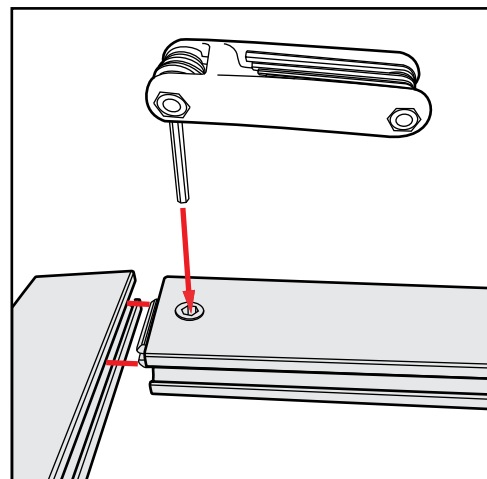

Extrusion & Lock Connection

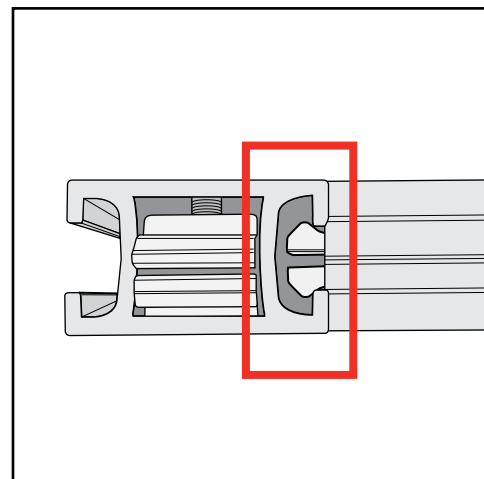

Engaged Lock



WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED





ALL CONNECTIONS MUST
BE TIGHTLY SECURED

Corner Connection


- 1) Loosen knobs, then slide vertical extrusions onto **corner connectors** of **lower** horizontal extrusion.
- 2) Slide **corner connectors** of **upper** horizontal extrusion into grooves of vertical extrusions.
- 3) Tighten all knobs to secure connection.

Disassembly

- 1) Loosen knobs on vertical extrusions.
- 2) Slide the vertical extrusions off of **corner connectors** on lower and upper horizontal extrusions.

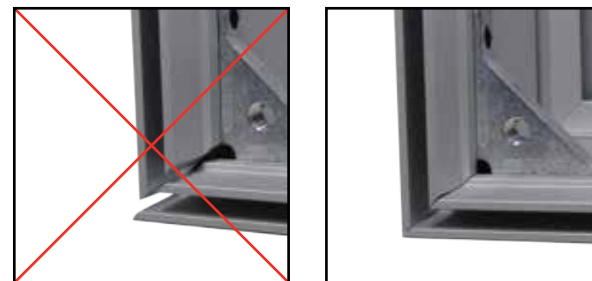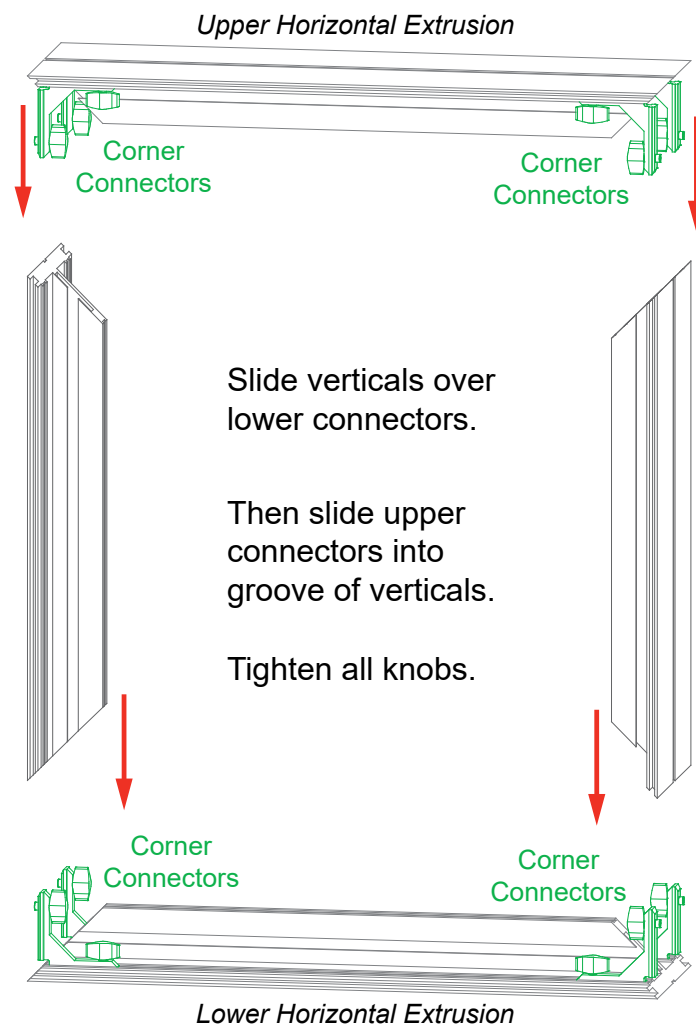


Adjust connectors if necessary to prevent gaps in connection.

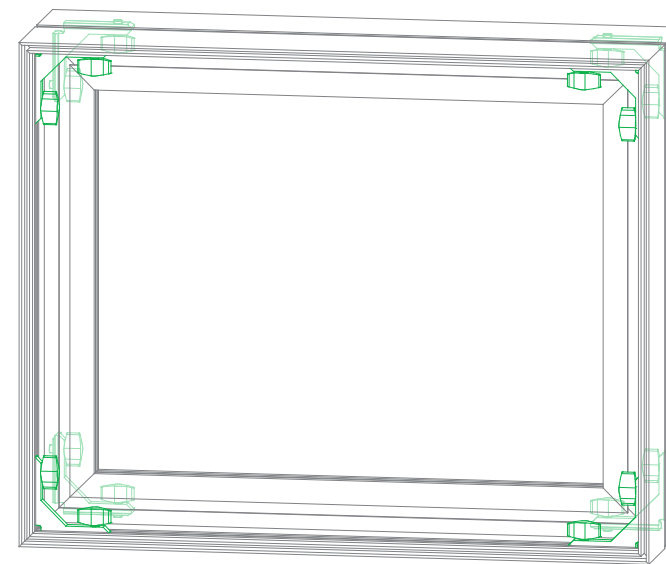

COMPLETED ASSEMBLY

All knobs must be tightened securely to ensure a proper connection.

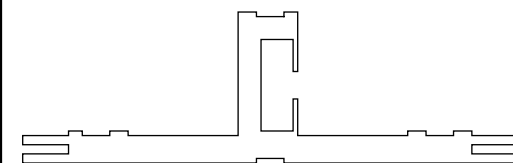

CEI152 Profile


SEG Graphic Installation

in 3 Steps

The Perfect Fit

Always insert graphic into each alternate corner, then into the sides of the frame. Otherwise the graphic will not fit into the frame correctly.


STEP 1: Attach Corners

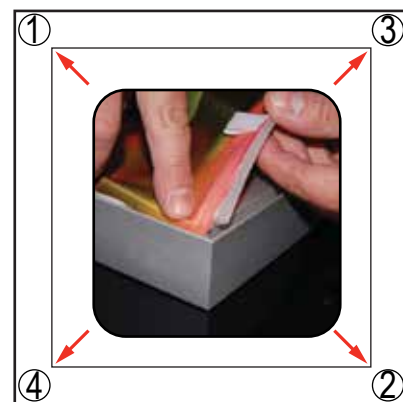

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.


STEP 2: Attach Middle

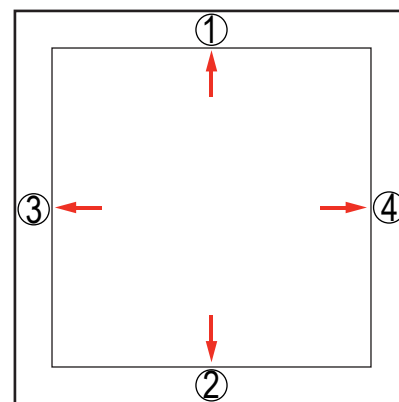

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

STEP 3: Attach Sides

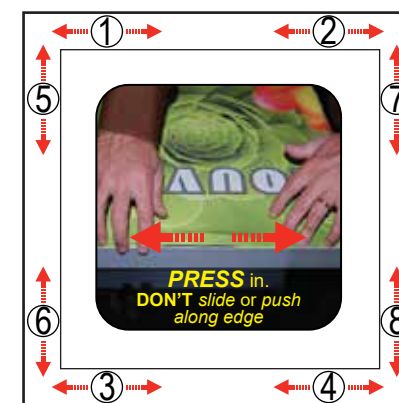

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.

Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.



To remove graphic from the frame, locate the fabric pull tab. Gently pull on the tab to remove the graphic.

Install video:



Item	Qty.	Description
1	1	36"h CEI152 Vertical Extrusion
2	1	36"h CEI152 Vertical Extrusion
3	1	36"w CEI152 Horizontal Extrusion
4	1	36"w CEI152 Horizontal Extrusion
5	1	27.6467"h CEI152 Vertical Extrusion
6	1	27.6467"h CEI152 Vertical Extrusion
7	1	27.6467"w CEI152 Horizontal Extrusion
8	1	27.6467"w CEI152 Horizontal Extrusion
9	8	2.353" Z44 Extrusion
10	2	5.252"h Z33 Vertical Extrusion


- Steps:
- Refer to the CEI152 Assembly general information page.
- 1) Assemble horizontals [3,4] between verticals [1,2].

2) Assemble horizontals [7,8] between verticals [5,6], inserting Infill.


3) Attach outer frame assembly [1/2/3/4] to inner frame assembly [5/6/7/8] using extrusions [9].

4) Connect extrusions [10] between horizontals [4,8] and [3,7] as shown.


5) Connect power cords to Supernova lights in lightbox.

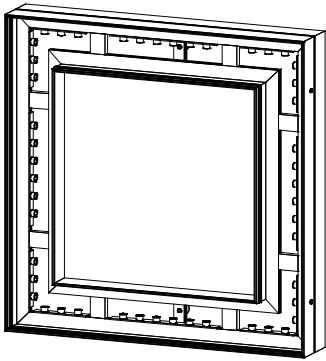


When assembled

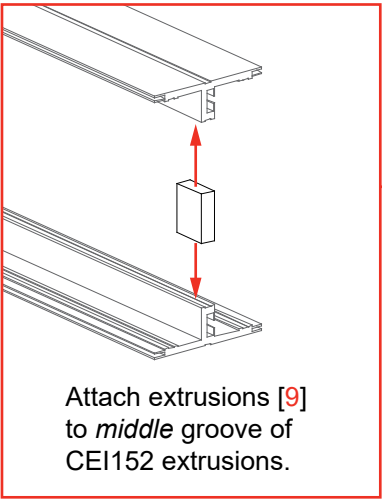



Attach extrusions [9] to *middle* groove of CEI152 extrusions.

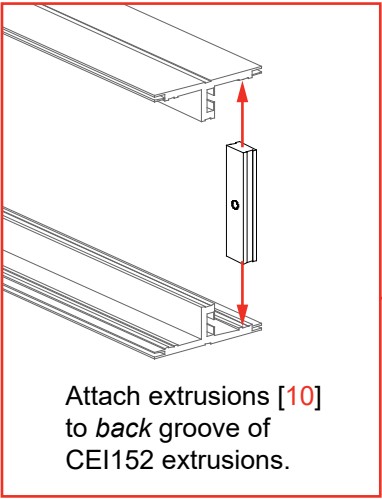

Attach extrusions [10] to *back* groove of CEI152 extrusions.

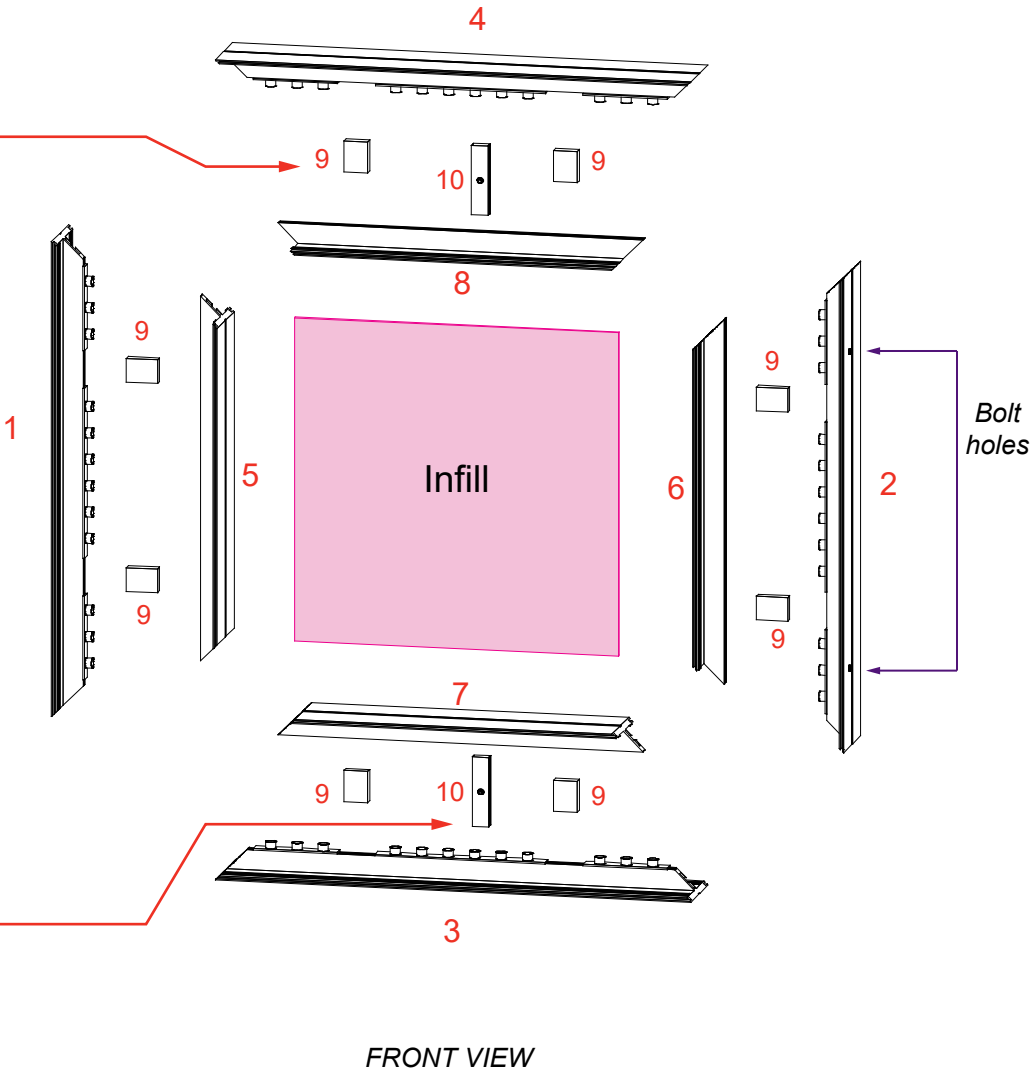

FRONT VIEW

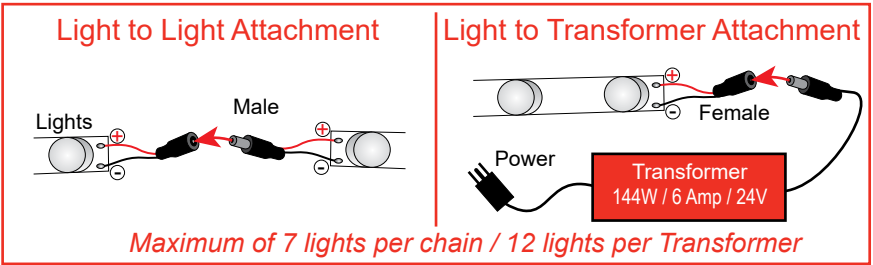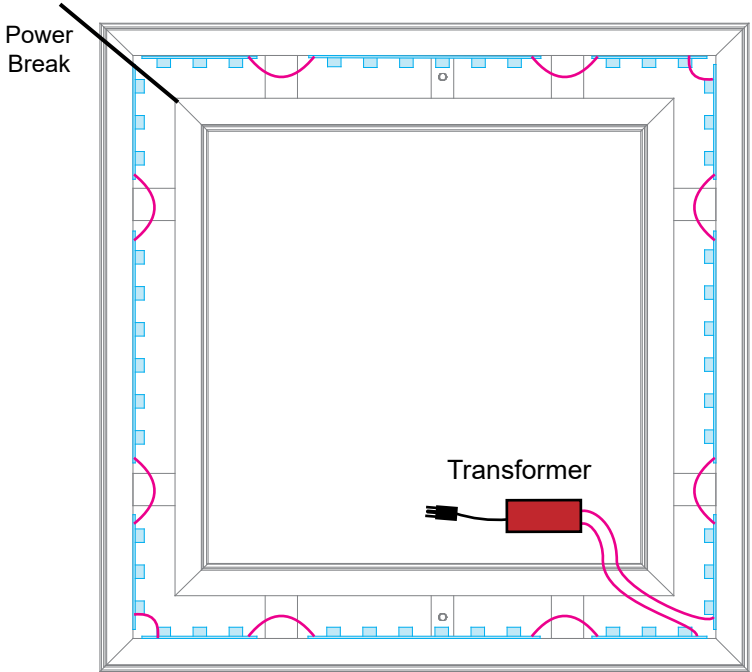


Light to Light Attachment

Light to Transformer Attachment

Maximum of 7 lights per chain / 12 lights per Transformer

SEG Graphic Installation

STEP 1: Attach Corners

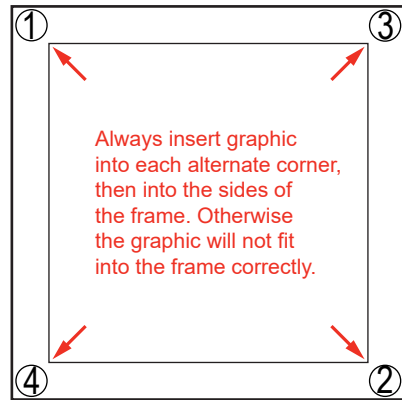


Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.




STEP 2: Attach Middle

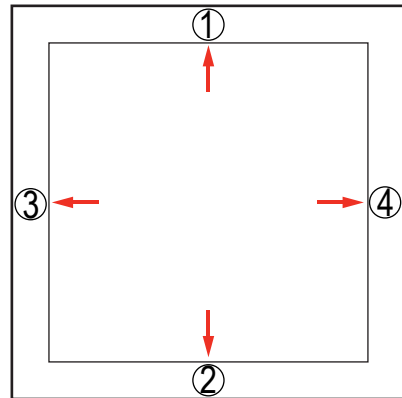

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

STEP 3: Attach Sides

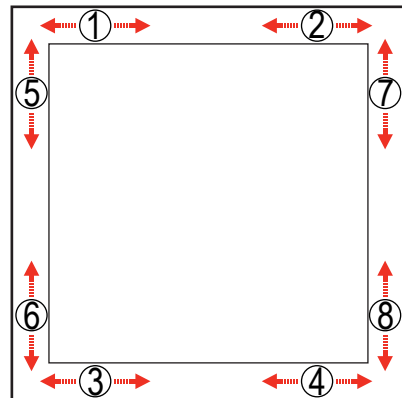

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.



Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.




To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.



Steps:

- 1) Apply SEG blocker to back of lightbox assembly.
- 2) Attach frame assembly to Counter, using **Standoff Barrels** & **Bolts**.
- 3) Run cords through wire management hole to power source.
- 4) Apply SEG graphic to front of lightbox assembly.
- 5) Connect power cords to wireless chargers.

* Standoff Attachment

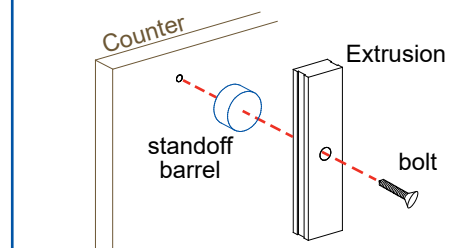

* Bolt Attachment

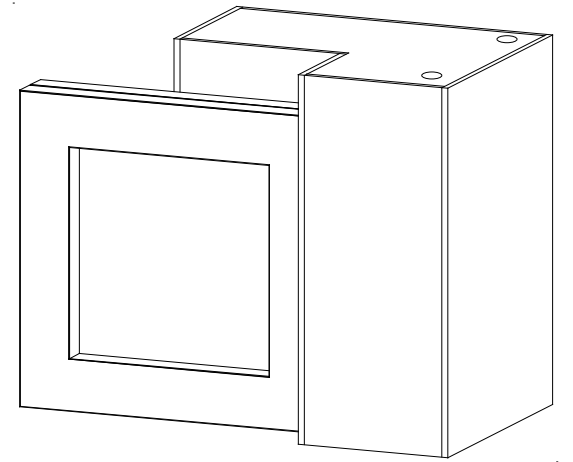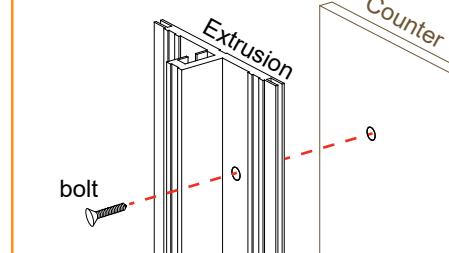

When assembled

